

Laundry Machine Operating Instructions

WASHERS

Top Load

1. Only wash items rated as machine washable.
2. Load clothes evenly & loosely.
Do NOT overload the machine!
3. Add laundry detergent. You can add fabric softener if desired.
4. Laundry machines are now push to start, no swiping required!
5. Select desired wash cycle settings. (see care instructions on clothing items)
6. For best results, remove clothes promptly at the end of the washer cycle.



Front Load

1. Only wash items rated as machine washable.
2. Load clothes evenly & loosely.
Do NOT overload the machine!
3. Add High Efficiency liquid laundry detergent and fabric softener (if desired).
4. Laundry machines are now push to start, no swiping required!
5. Select desired wash cycle settings. (see care instructions on clothing items).
Once cycle starts, **DOORS WILL LOCK** and cannot be opened until wash cycle is complete. **OPENING THE DOOR DURING THE WASH CYCLE WILL DAMAGE THE MACHINE.**
6. For best results, remove clothes promptly at the end of the washer cycle.

DRYERS

1. Clean lint filter before each use for faster drying times.
2. **Do NOT overload the machine** so that clothes may tumble freely for faster drying times.
3. Add dryer sheets (if desired).
4. Laundry machines are now push to start, no swiping required!
5. Select desired dry cycle settings. (see care instructions on clothing items).
DRYER WILL STOP IF DOOR IS OPENED DURING CYCLE. RESELECT CYCLE TO CONTINUE DRYING.
6. To avoid wrinkling of garments, remove clothes promptly at the end of the drying cycle.

***DO NOT DRY WOOL, RUBBER, OR PLASTICS!**